

104-PRO WIRING DIAGRAM FOR OPTIONAL HARD-WIRING

IF YOU WISH TO USE THE OPTIONAL EXTERNAL ANTENNAS, PLEASE DO NOT FORGET TO MOVE THE ANTENNA SWITCH LOCATED UNDER THE GOLD CONNECTORS FROM INT (INTERNAL) POSITION TO EXT (EXTERNAL) POSITION. EXTERNAL ANTENNAS WILL IMPROVE SIGNAL STRENGTH.

